


HOTBODIES RACING.COM

Honda CBRF4i Undertail Kit

(2001-03, Available in: Honda Red, Honda Yellow, Honda Silver and Pearl White)

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT AND USE SAFETY GOGGLES AND LEATHER GLOVES. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! HOTBODIES RACING WILL NOT REPLACE YOUR STOCK GLOVE-BOX FOR ANY REASON, MEASURE TWICE AND CUT ONCE!

- 1) Carefully remove the tail section body work. Save all bolts, washers and plastic rivets for re-installation of tail. Disconnect and remove the brake light (with all mounting grommets and washers), license plate and turn signals, key lock (with clip) and move all wiring out of the cutting areas. Remove the two bolts at the rear end of the stock fender (inside glove box) to allow the end to hang down for cutting.

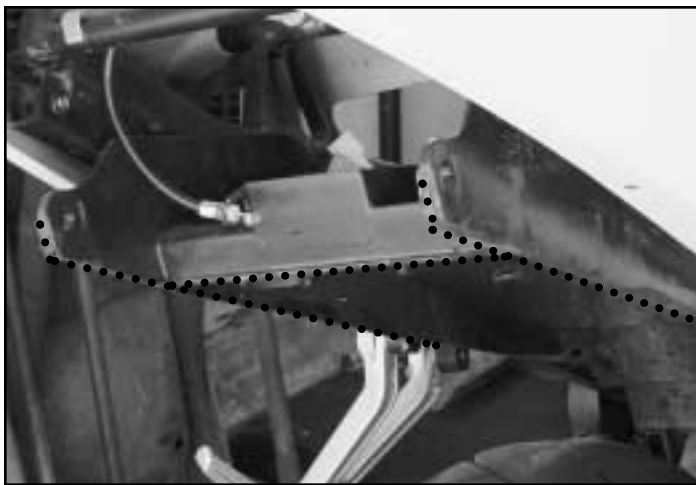

- 2) Using a "Dremel" tool or cutting disc (this can also be done using a sharp edged knife, but is not recommended), remove the plastic shown in the photos to the above and below. Be sure to take your time cutting, so that you don't cut away any more plastic than necessary.




- 3) Using a small drill bit, drill 2 holes for the installation of the "lock cable mounting arm". Notice that you will be using the small screw from the original mounting point and 1 allen bolt with lock nut (provided), mount the lock arm as shown.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.



4) relocate relays to outside of subframe using 2 zip ties (not provided)

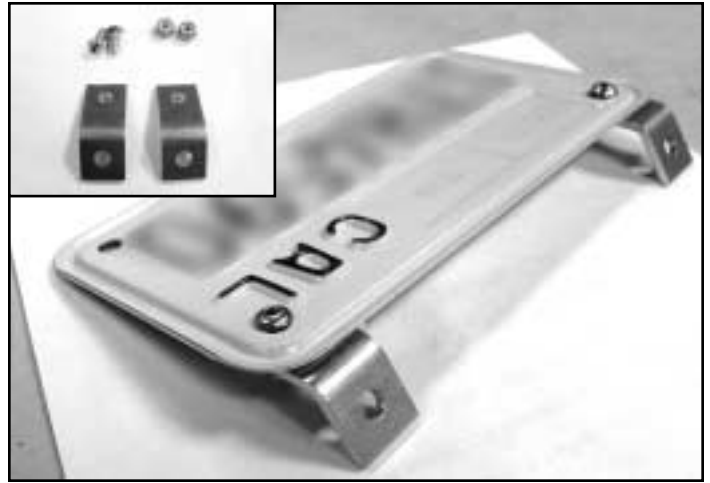

5) *Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on undertail, carefully mark and drill holes, install using the two (2) sets of allen bolts and lock nuts.



6) Re-mount glove box to bike using stock hardware. Remount tail section, leave bolts loose to allow flex in bodywork. Attach lock cable to lock clip as shown.



7) Inset lock into undertail using stock lock mounting clip, make sure the lock is in the correct position with the lock cable arm to function properly. Insert undertail left side first, then right side, be carefull not to crack or scratch undertail. Use your stock plastic screw rivets to hold undertail in place. Attach lock cable to lock, check movement, adjust if necessary. Tighten all hardware on tail section, attach seat. Your done!

WIRING INSTRUCTIONS:

Connect the right (blue wire) and left signal (orange wire) wires on the bike, to the respective right/left orange wires on the undertail. Connect the ground wires (green) to the black wires on the undertail. Connect the brake wires (green w/ yellow tracer) to the red wires on the undertail and connect the running light wires (brown) to the blue wires. Your done!

** After this modification your undertail is not returnable. Paint is not warranted against paint chips, flaking or scratches from installation or rocks being thrown from tire into the tray.*

Need Help? If you need additional help with the installation of the undertail, go to www.hotbodiesracing.com and look for the "FAQs" link at the bottom of the home page. Most of your general questions can be answered on those pages. This installation does require a basic mechanical aptitude, if in doubt, contact your local motorcycle shop and have a professional mechanic perform the installation, 3 hours is the average installation time.