



## 2011 ZX10R UNDERTAIL INSTRUCTIONS


HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! WHEN IN DOUGHT, CALL US!




1. Remove the rear seat.



2. Unbolt the top tail fairing.

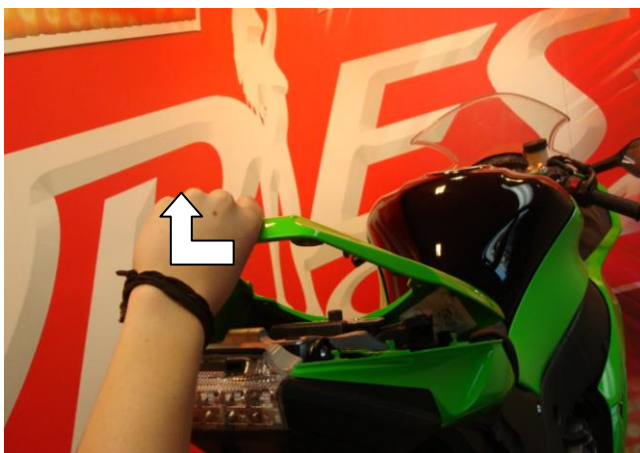


3. Slide the top tail fairing back and up to remove.

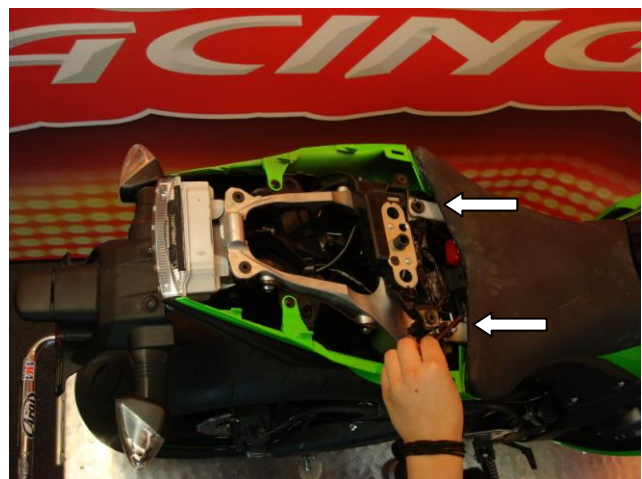

4. Unbolt the front seat, and remove.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

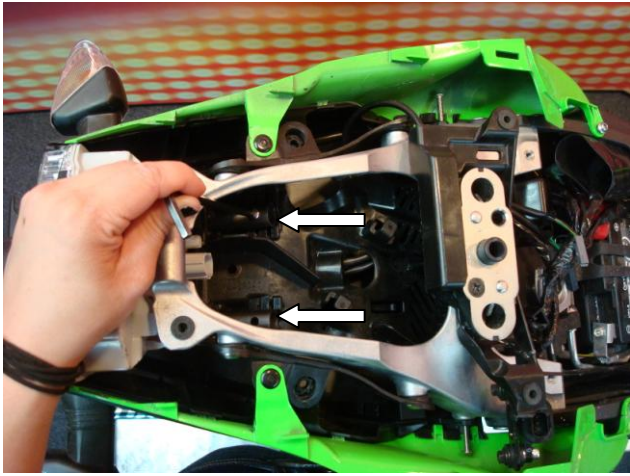


5. Unbolt mud flap.



6. Pull mud flap to remove.



7. Remove the back 2 pop rivets.

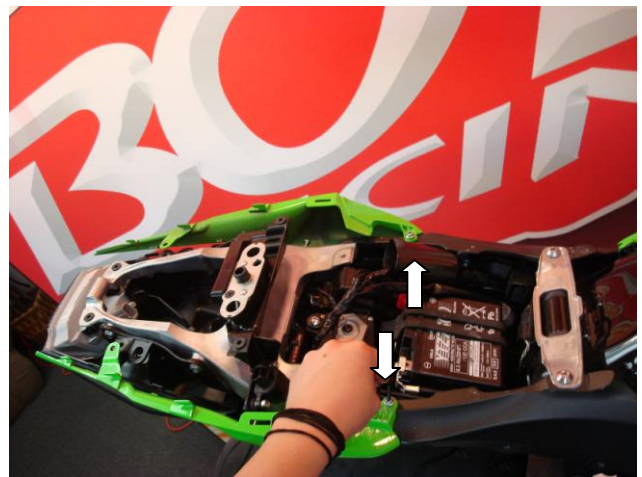

8. Remove bolts from front of tail fairings.




9. Remove fairings, and back bolts from stock undertail.




10. Remove bottom pop rivets, and pull undertail to remove.


**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

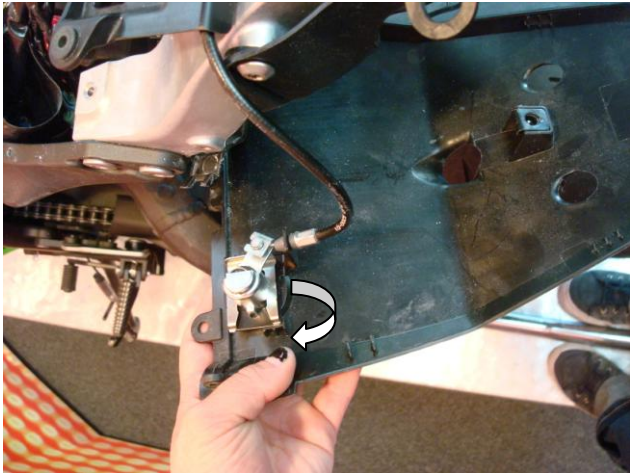

11. Disconnect the lock mechanism.

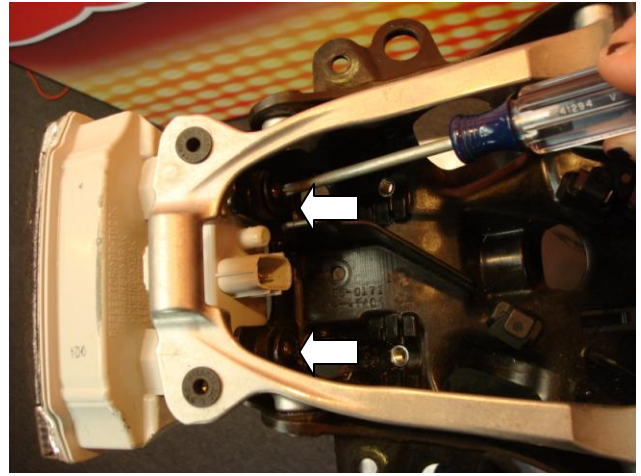


12. Remove the taillight.

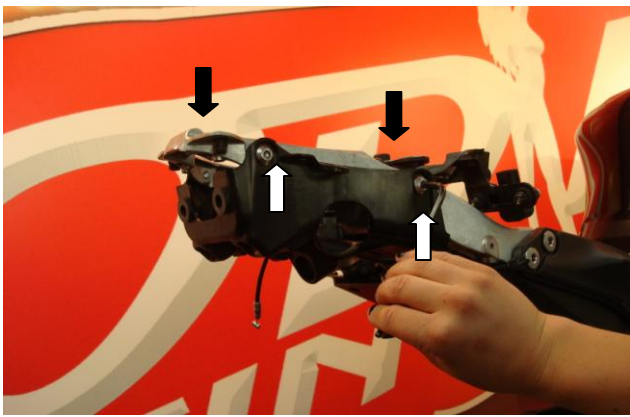


13. Remove the bolts holding the stock storage compartment to the sub frame.



14. Remove the stock storage compartment.

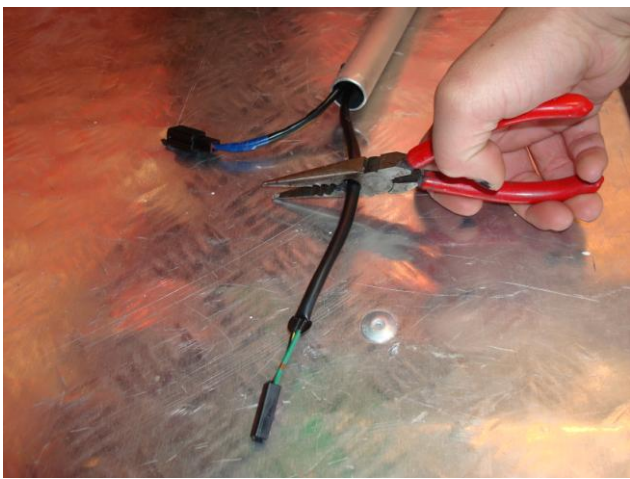


15. Remove the electrical plugs from the mud flap.

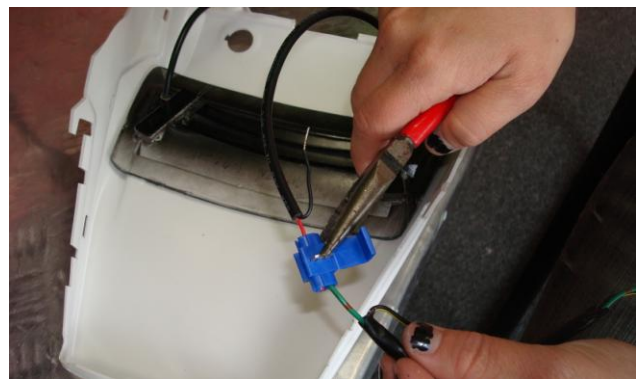


16. Using the supplied 3m Scotchlocks attach the left turn signal hot wire (green with a red tic) to the undertail hot wire (red). Then repeat on the right side.


**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

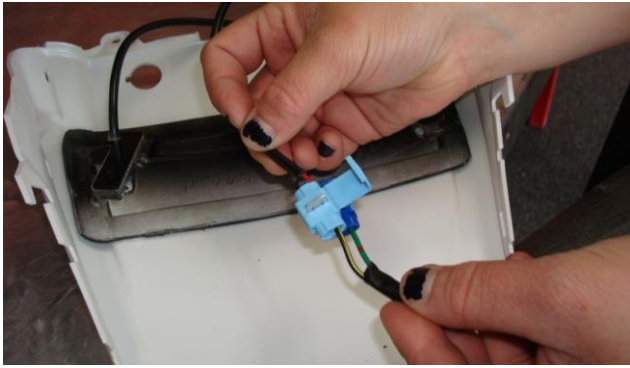

17. Using the supplied 3M Scotchlocks attach the left turn signal ground (black with yellow stripe) to the undertail ground wire (black). Repeat for the right side.

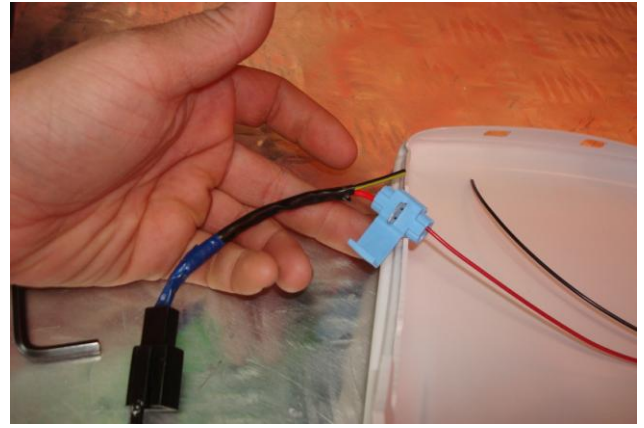

18. Using the supplied 3M Scotchlocks attach the License plate hot wire (red) to the undertail hotwire (red).

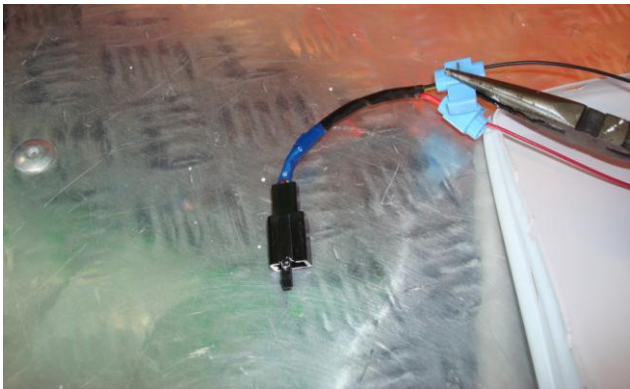


19. Using the supplied 3M Scotchlocks, attach the License plate ground wire (black with a yellow stripe) To the undertail ground wire (black).



20. Reconnect the taillight.




21. Attach the taillight to Hotbodies Racing storage compartment, using the stock hardware.

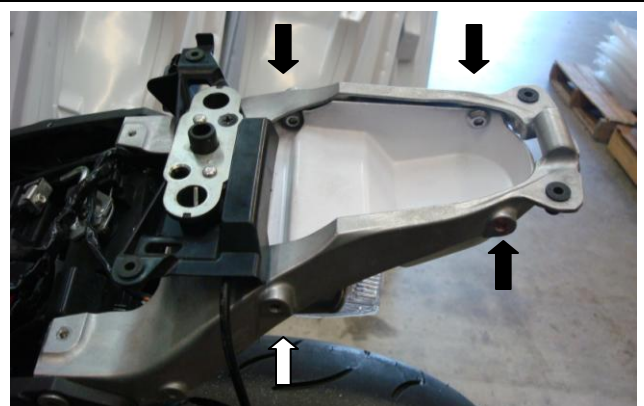

22. Attach the new storage compartment with the taillight attached to the sub-frame, using the stock hardware on the inside.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

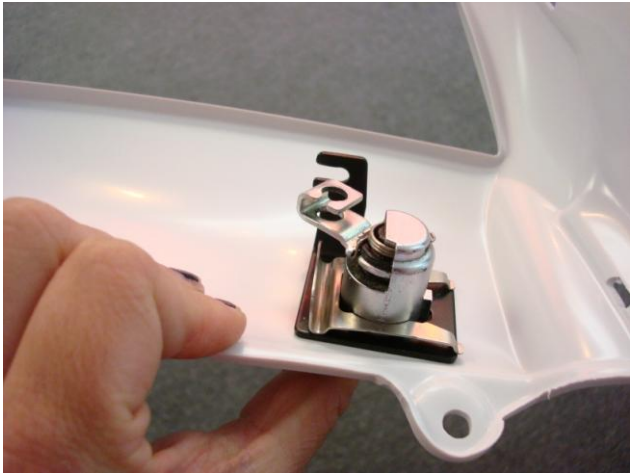

23. Install the lock mechanism into new undertail.



24. Attach the cable to the lock mechanism.




25. Connect the turn signals, and ensure proper function.



26. Install the undertail, making sure the tabs are inside the battery tray.




27. Insert pop rivets into bottom of the undertail.

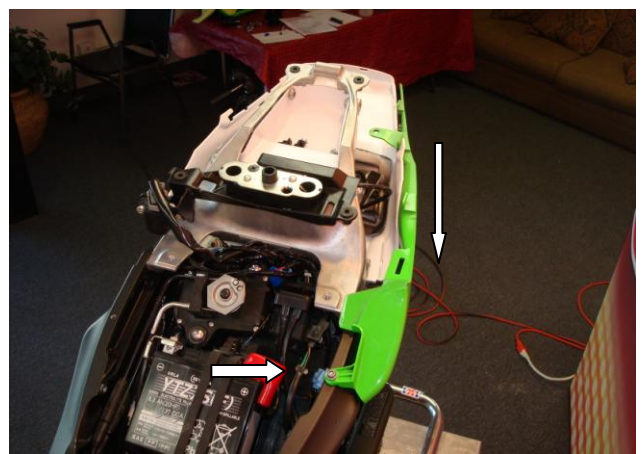


28. Slide the left tail fairing into place, and tighten the front bolt into place.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Holbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

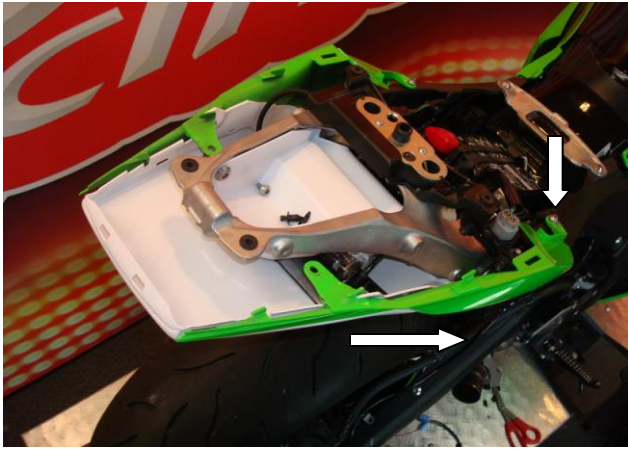

29. Slide the right tail fairing into place, and tighten the front bolt into place.

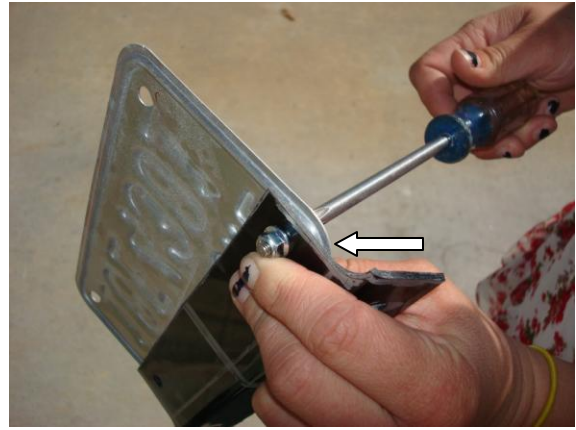

30. Screw the license plate into the bracket/s. (either stock bracket or supplied L brackets)



31. Use supplied bolts to mount license plate. (Position depends upon personal choice)



32. Install the front seat, using the stock hardware.



33. Install the top tail fairing. Squeeze both sides as you slide into place. Ensure all tabs are engaged



34. Completely tighten all tail bolts.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Holbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.




35. Ensure proper passenger seat release.



36. Install passenger seat.



37. You are done.

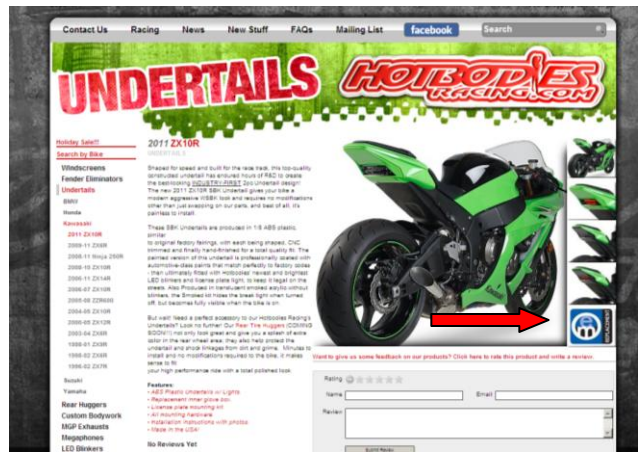

38. Or visit our website for video instructions.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.