


# HOTBODIES RACING.COM

## Suzuki GSX-R Undertail Kit

(00-03, Available in: Pearl White, Gloss Black, Silver, Yellow, Telphonica Blue and Alstare Purple)

**HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT AND USE SAFETY GOGGLES AND LEATHER GLOVES. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! HOTBODIES RACING WILL NOT REPLACE YOUR STOCK GLOVE-BOX FOR ANY REASON, MEASURE TWICE AND CUT ONCE!**

- 1) Carefully remove the tail section body work. Save all bolts, washers and plastic rivets for re-installation of tail. Disconnect and remove the brake light (with all mounting grommets and washers), license plate and turn signals and move all wiring out of the cutting areas. Remove the two bolts at the rear end of the stock fender (inside glove box) to allow the end to hang down for cutting.

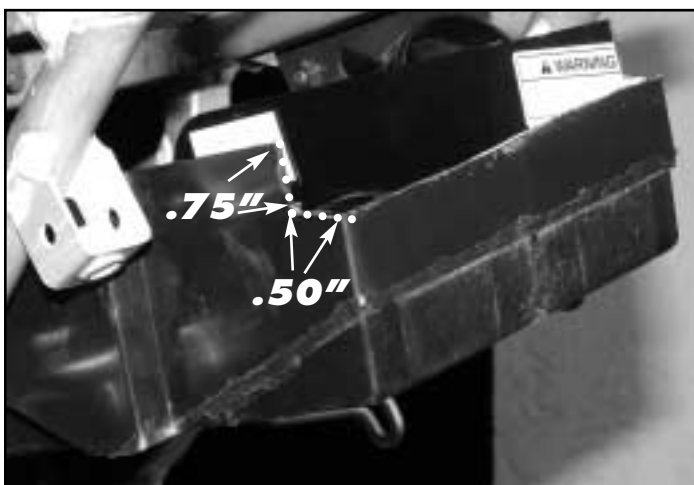

- 2) Using a "Dremel" tool or cutting disc, remove the plastic shown in the photos above. Using 2 zip ties, secure the rear of glove box.



- 3) Cut cargo net hooks on subframe as shown.



- 4) \*Install license plate brackets to back side of license plate as shown. Now hold license plate in desired location on undertail, carefully mark and drill holes, install using the two (2) sets of allen bolts and lock nuts.

### WIRING INSTRUCTIONS:

\* Connect the right (light green wire) and left signal (black wire) wires on the bike, to the respective right/left orange wires on the undertail. Connect the ground wires (black w/ white tracer) to the black wires on the undertail. Connect the brake wires (white w/ black tracer) to the red wires on the undertail and connect the running light wires (brown) to the blue wires.

\* After this modification your undertail is not returnable. Paint is not warranted against paint chips, flaking or scratches from installation or rocks being thrown from tire into the tray.



- 5) Before replacing bodywork on bike, place undertail in tail section, mark 2 holes at bottom of undertail and drill to use the stock pop rivets. Replace bodywork, Insert undertail light first, then sides, be carefully not to crack or scratch undertail. Insert pop rivets as shown into tail and undertail, insert and tighten all fasteners.



- 6) If your tail is drooping behind the seat cowl, fix using 2 zip ties and bolts provided.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.