




2011 BMW S1000RR UNDERTAIL INSTRUCTIONS


HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! WHEN IN DOUBT, CALL US!




1. Remove the back seat.

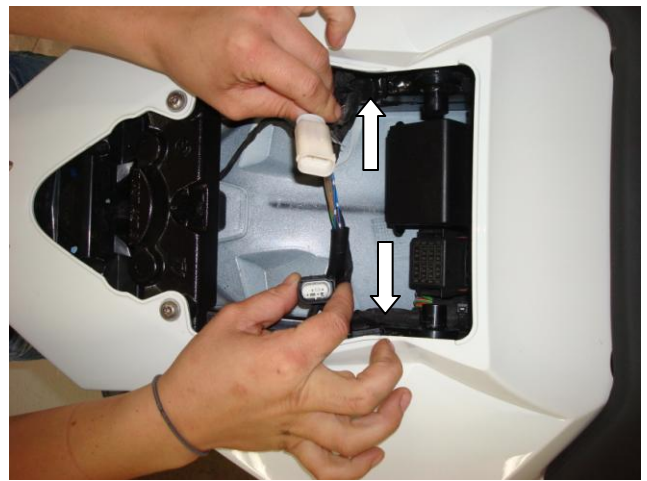

2. Disconnect the turn signal connector.

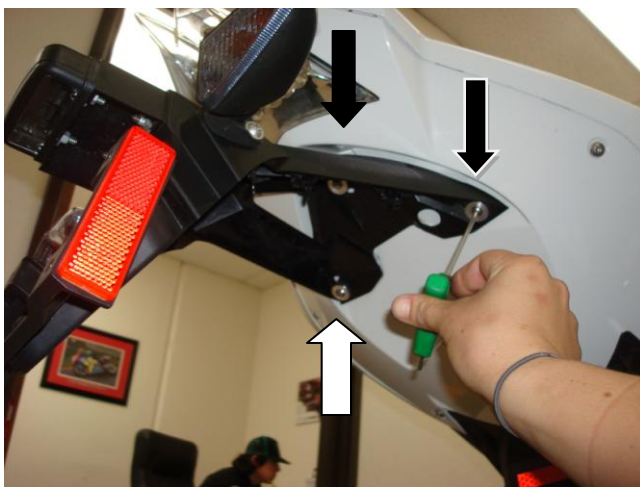


3. Remove the 3 bolts holding the mud flap to the bike.

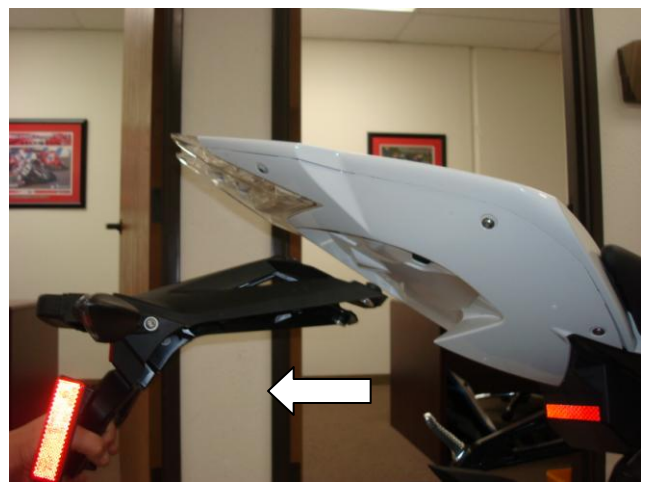


4. Remove the mud flap from the bike.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

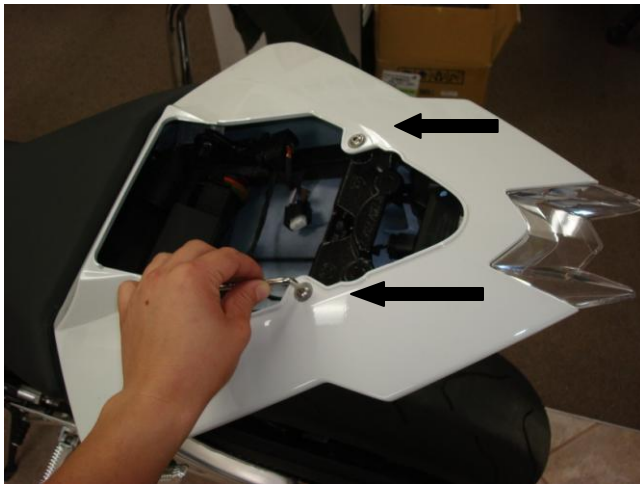


5. Remove the 2 bolts from the top of the tail fairing, this makes removing the undertail easier.

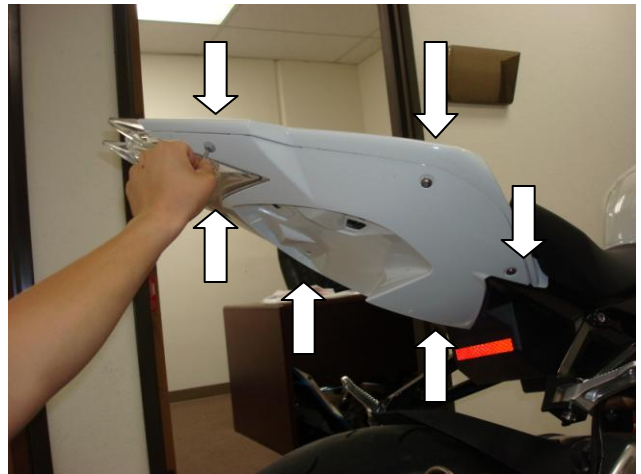


6. Remove 6 bolts holding the stock undertail to bike.




7. Remove the stock undertail one side at a time. Be careful not to scratch the stock fairings.

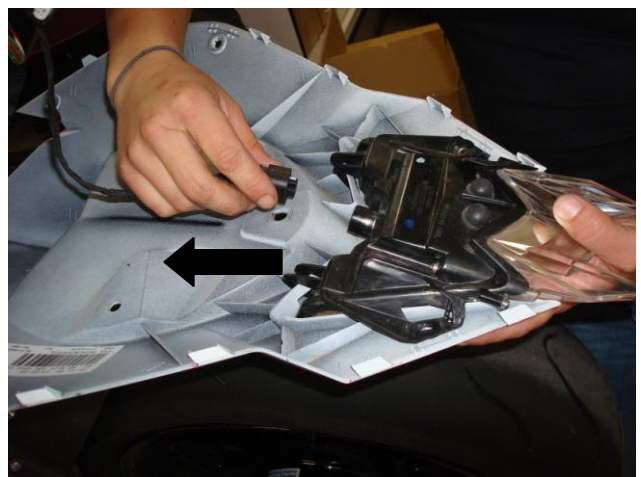

8. Disconnect the taillight from the bike.

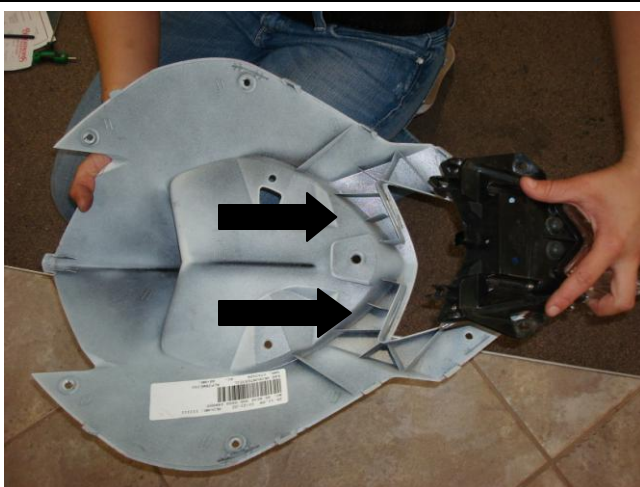

9. Un-clip the taillight from the stock undertail.

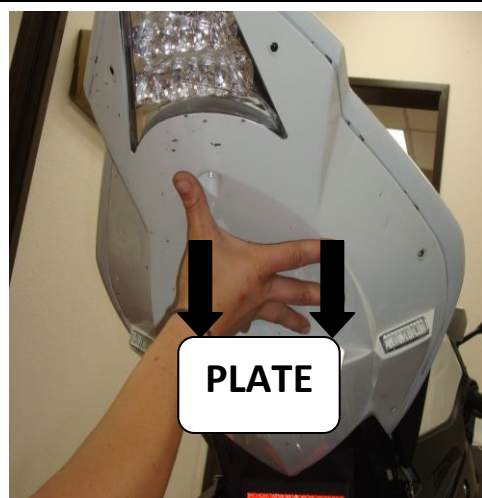


10. Mark license plate holes then drill off bike. Mount plate with supplied hardware. (Optional)

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Holbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.




11. Use the stock connector and connect to Hotbodies Racing undertail. (See diagram at end)

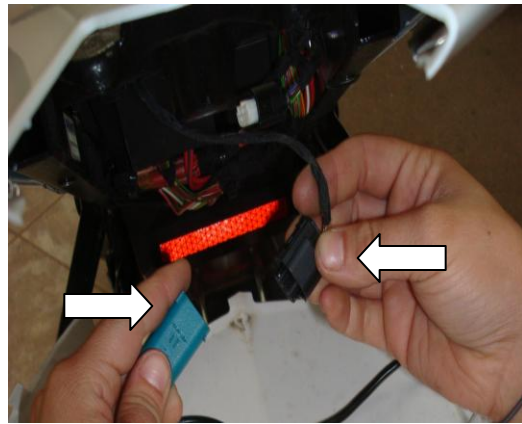


12. Reconnect the signals and license plate light and check for proper function.



13. Reconnect the taillight to bike.

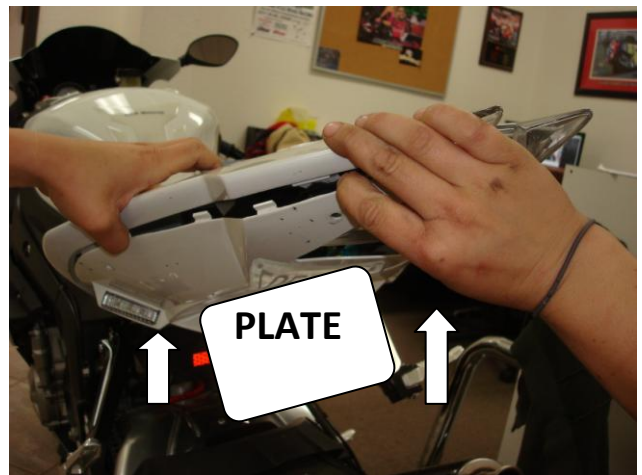

14. Install undertail one side at a time, being sure that the bottom tab is engaged.

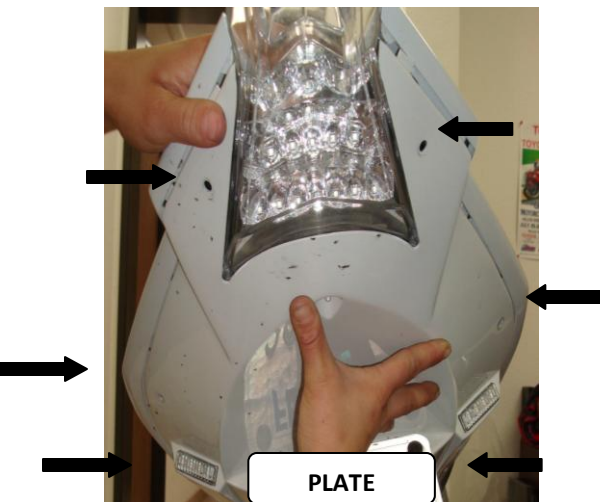

15. Tighten 6 stock bolts to secure the undertail.



16. Tighten the 2 bolts holding the top tail fairing into place.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.



17. Lock the back seat into place.



18. Watch our video online.

Wiring instructions:

License Plate light: Green on connector goes to the red on undertail. Brown on connector goes to black on undertail.

Left turn signal- Red and blue striped on the connector goes to red on the undertail. Brown on connector goes to the black on the undertail.

Right turn signal- Blue and black striped on the connector goes to red on the undertail. Brown on connector goes to the black on the undertail.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Holbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.