



HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT AND USE SAFETY GOGGLES AND LEATHER GLOVES. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! HOTBODIES RACING WILL NOT REPLACE YOUR STOCK GLOVE-BOX FOR ANY REASON, MEASURE TWICE AND CUT ONCE!

1) Carefully remove the stock rear tire hugger. Save stock pop rivet and screws for re-installation of Hotbodies hugger later.

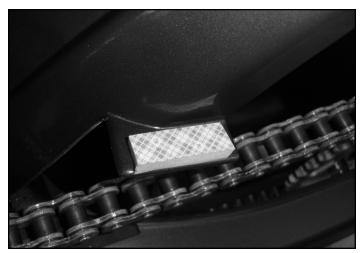

2) Use stock pop rivets and screws to re-install hugger. Use provided double-sided tape to connect the hugger to the chain guard. If not installing a chain guard, you may remove the tape.

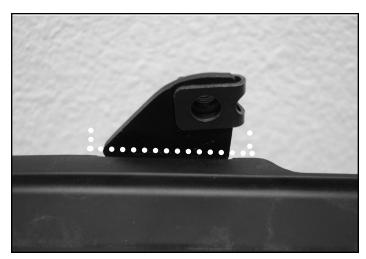

2) Remove the plastic shown in the photo above if you do not want to see this piece exposed after the installation.



3) Tighten all hardware on hugger and chain guard, using all stock mounting hardware. Your done!

READ CAREFULLY BEFORE INSTALLATION!

Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.