





2008 KAWASAKI NINJA 250R TAG BRACKET INSTRUCTIONS


HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS! WHEN IN DOUBT, CALL US! TOLL FREE 800-555-2805

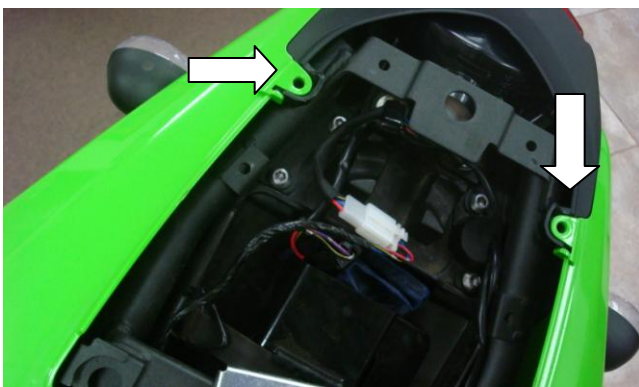

1. Remove the rear seat, and bolts securing the tail fairing.

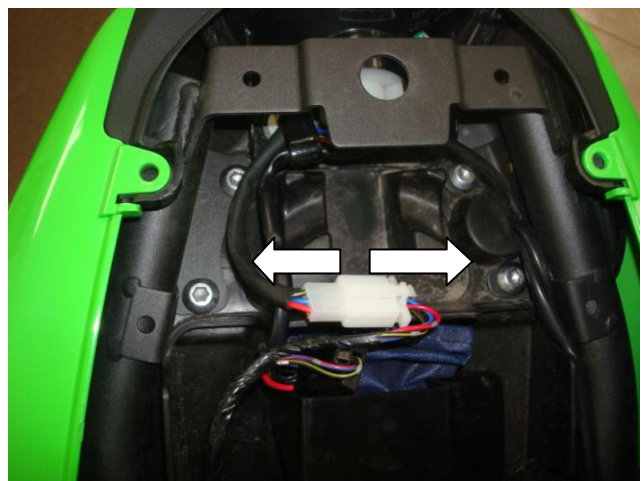

2. Unplug turn signals, and remove the side tail fairings.

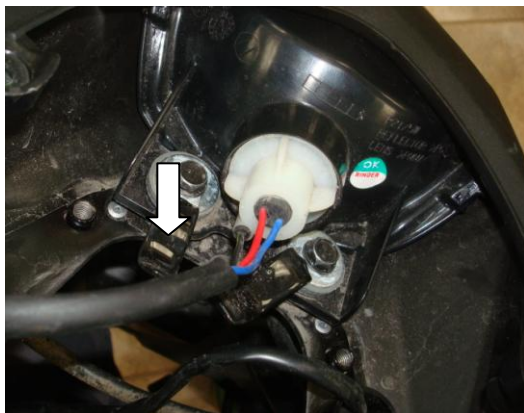

3. Unbolt the mud flap from sub frame and unplug the taillight from the bike.



4. Remove the mud flap from the bike, and unplug the taillight from mud flap.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.



5. Remove metal sleeves from the rubber grommets on the taillight.



6. Assemble the supplied bracket and hardware as shown.



7. Connect the bracket and stock trim piece to the taillight as shown.



8. Hold the taillight up to bike.



9. Slide the Hotbodies Racing Tag bracket around taillight. Fasten through both of the brackets and the sub frame with stock bolts, and supplied nuts.



10. Reinstall tail fairings and rear seat. Your done.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.